


471813 Rev00

Please read these instructions thoroughly before installation.

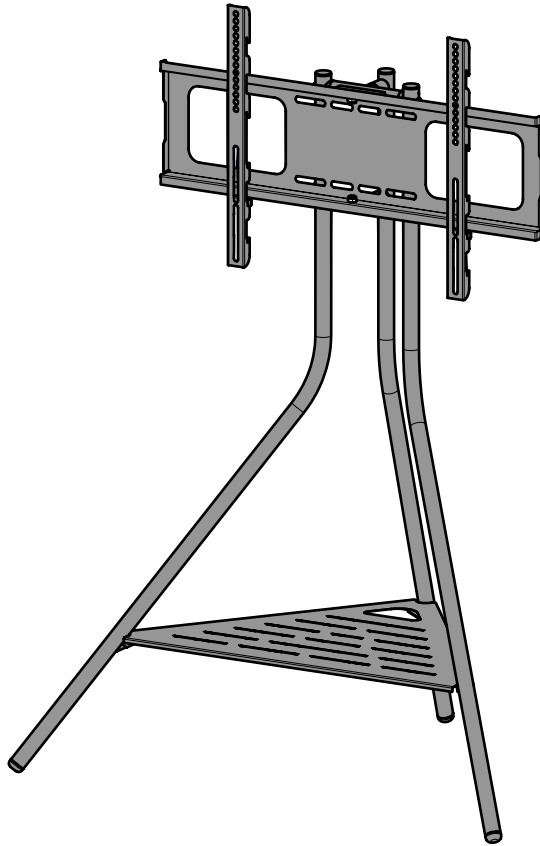

Please don't return me to the store

If you are unsure or need advice
please contact our **UK-based support team:**



0333 320 0463 | avfgroup.com

Phone lines open Mon-Fri during AVF office hours

IMPORTANT INFORMATION!


We advise that before starting the assembly of this product that you familiarise yourself with the instructions and the parts list in this leaflet.



Do not overtighten any part of this assembly.


Check all nuts and bolts from time to time.

Maximum TV weight and shelf capacities

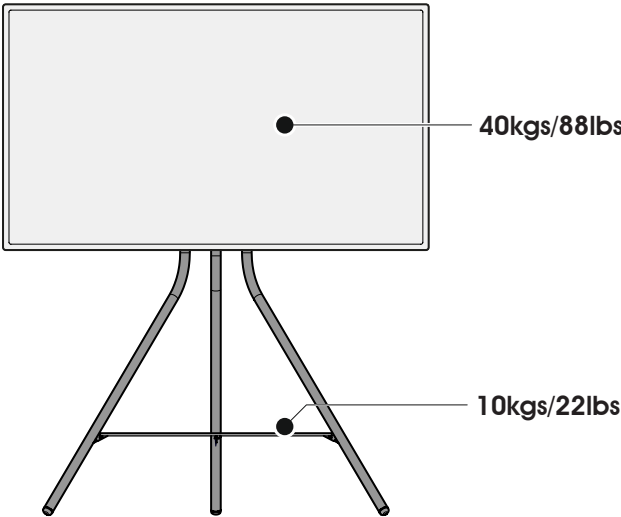




WARNING: Wherever possible distribute weight evenly.

TV Screws, Reducers and Spacers

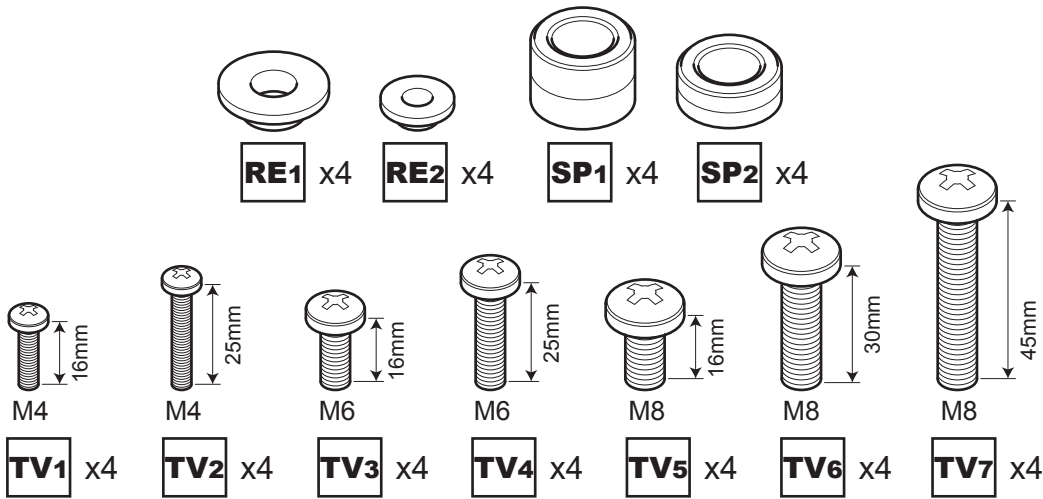

Boxed Parts


Tools Recommended

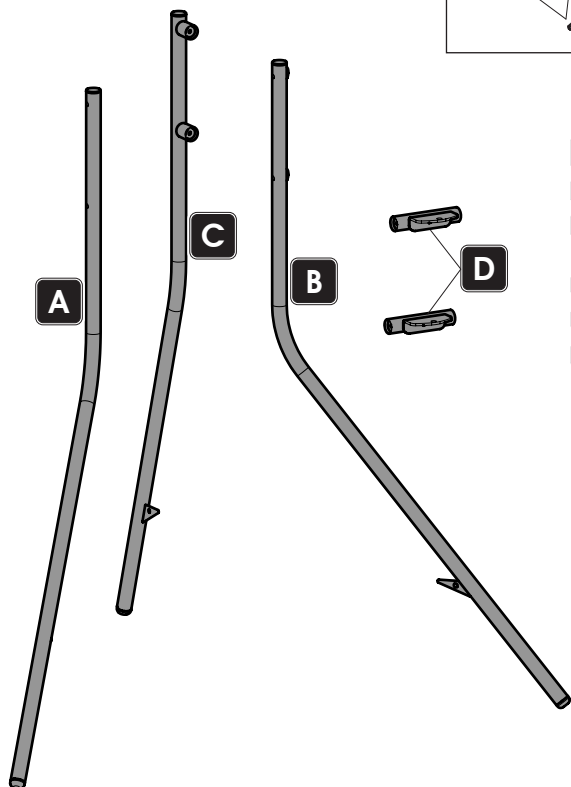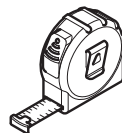

D



F

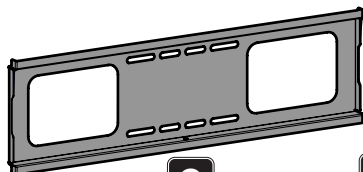


G



F




E



M6

H



M8

I




5mm

J



4mm


K



M8

M


X2



M6

O


X3



M6


Q

X6



R

X2



M5

S

X2



T

X3



U

X6



M8

L

X2



M8

N


X2




P

X3

Measure the TV fixing holes Width and Height

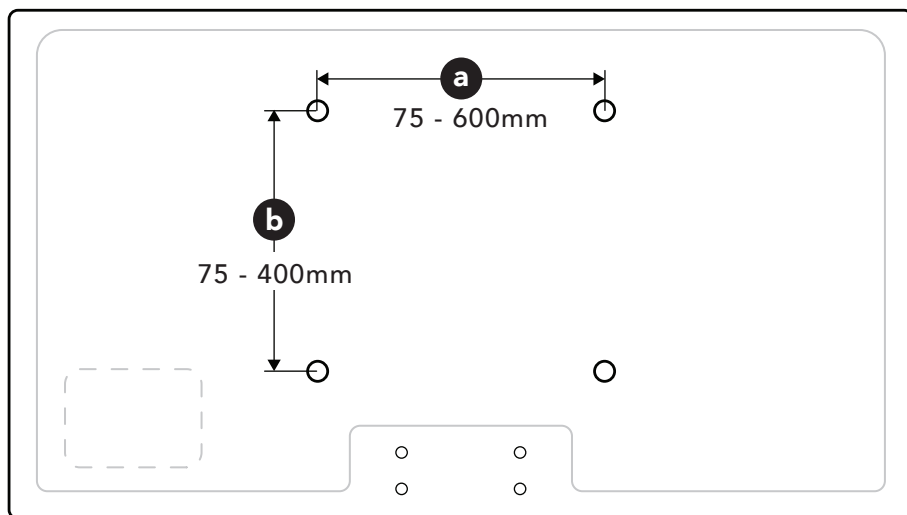

If width **a** is greater than 600mm or height **b** greater than 400mm
STOP installation now and contact the customer helpline.

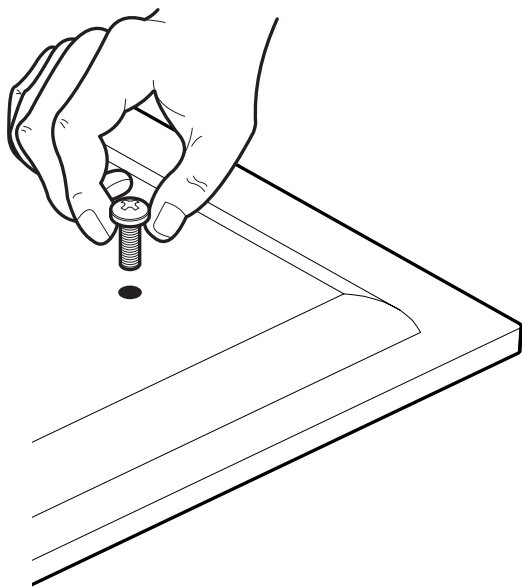


Determine which diameter TV Screws
fit your TV and put them to one side.



M4, M6 or M8

We will select the correct length later.

1

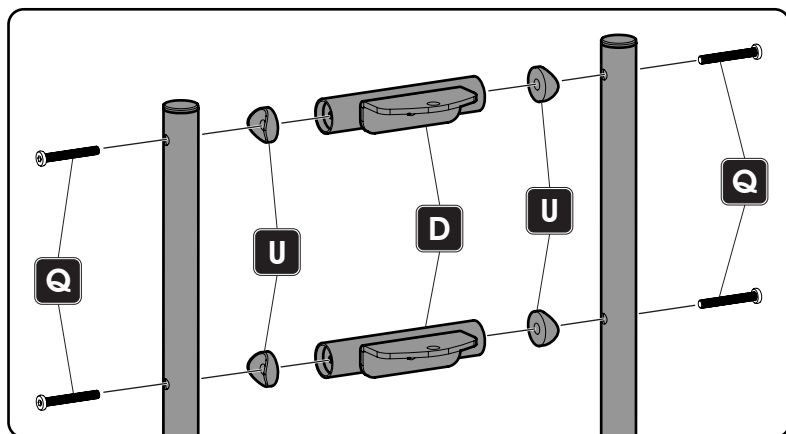

DO NOT fully tighten

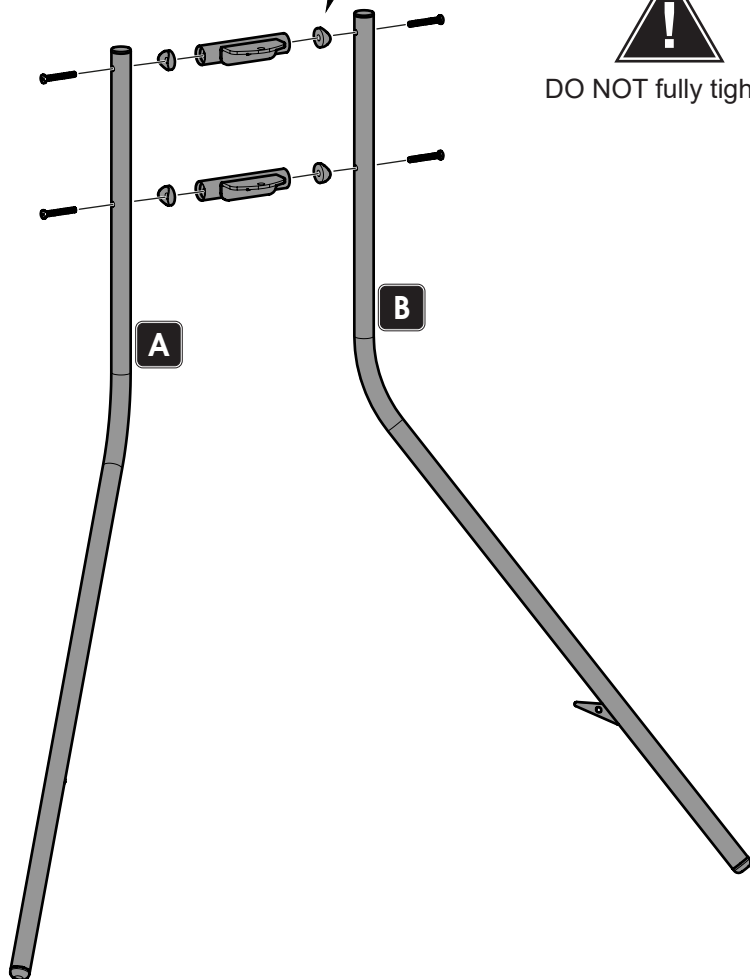


M6

Q
X4





U
X4

2

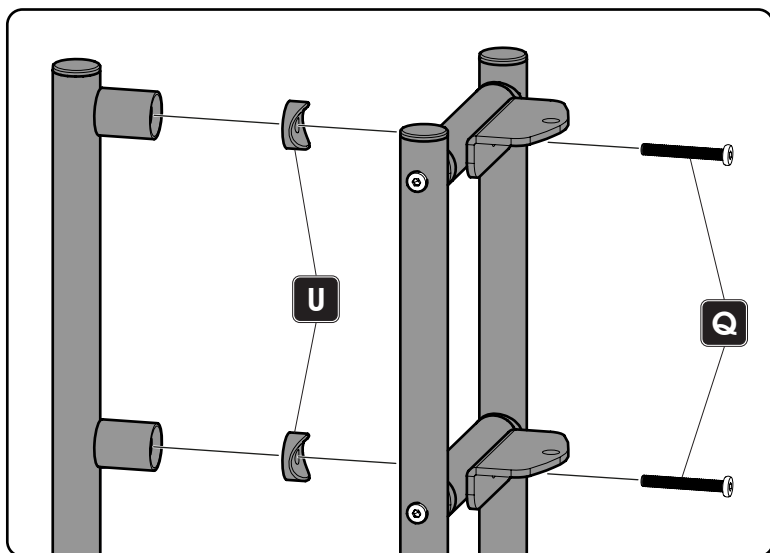

DO NOT fully tighten

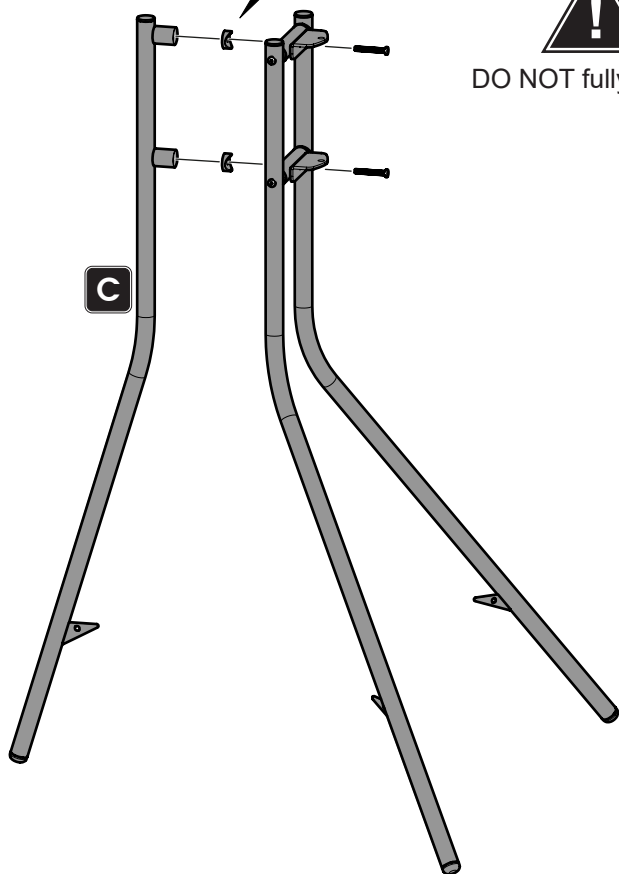


M6

Q
X4





U
X4

3

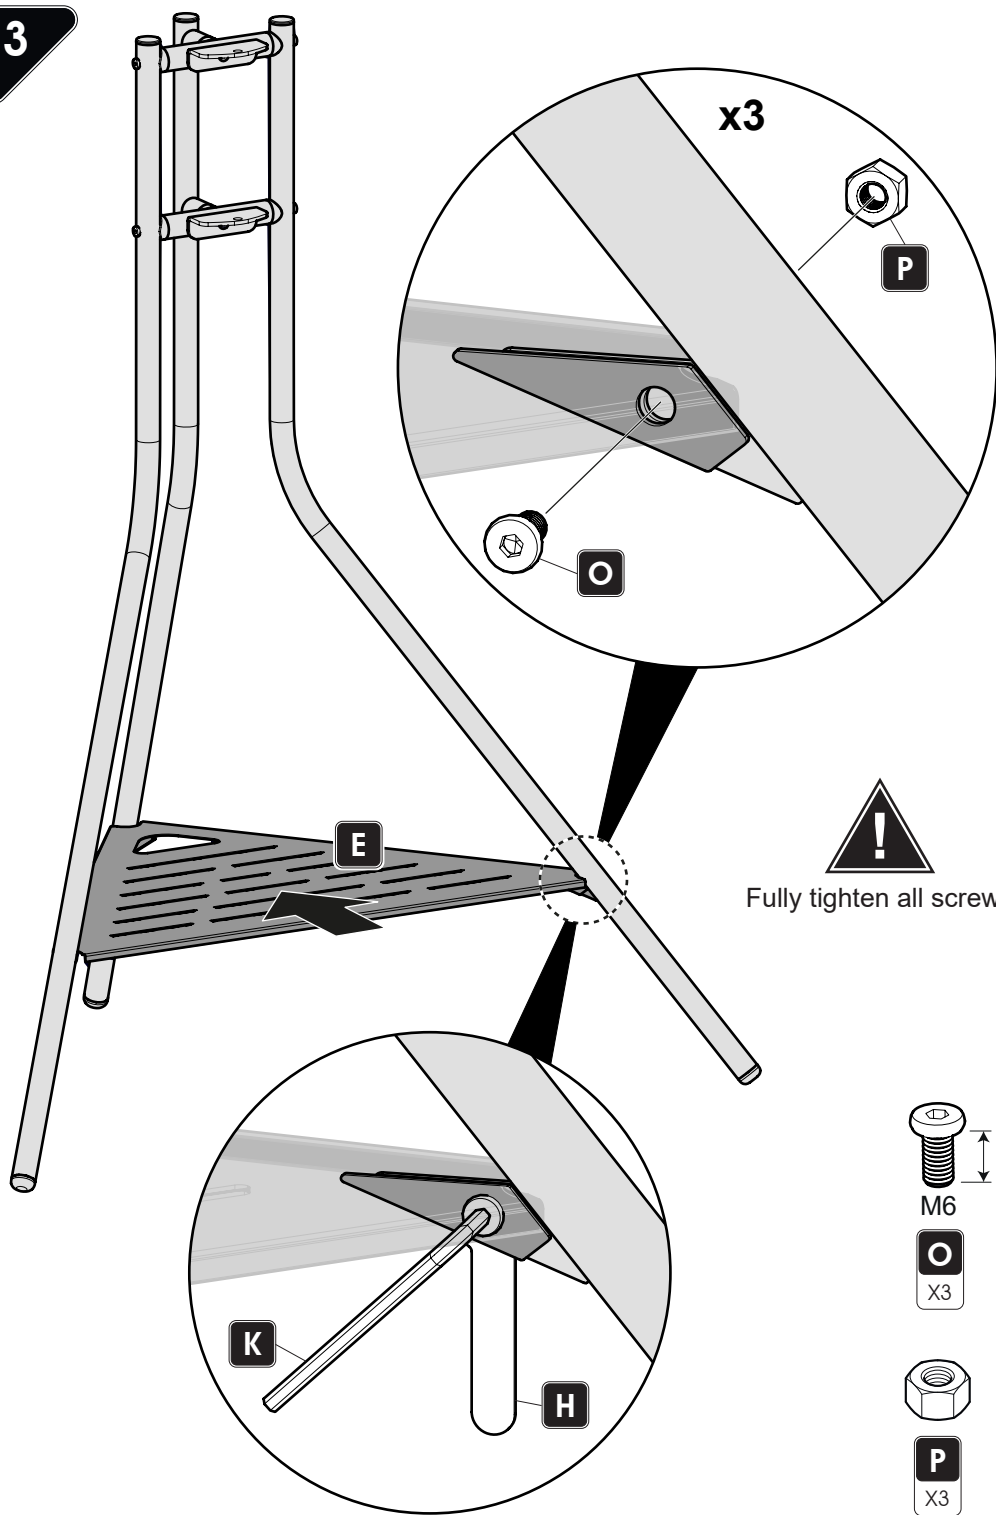


4



i

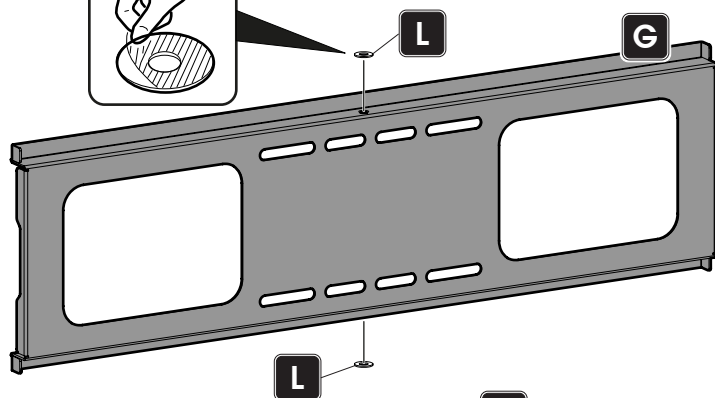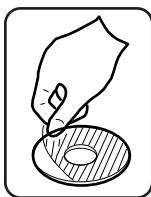

ii

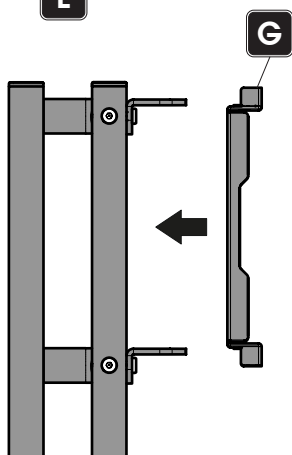


iii

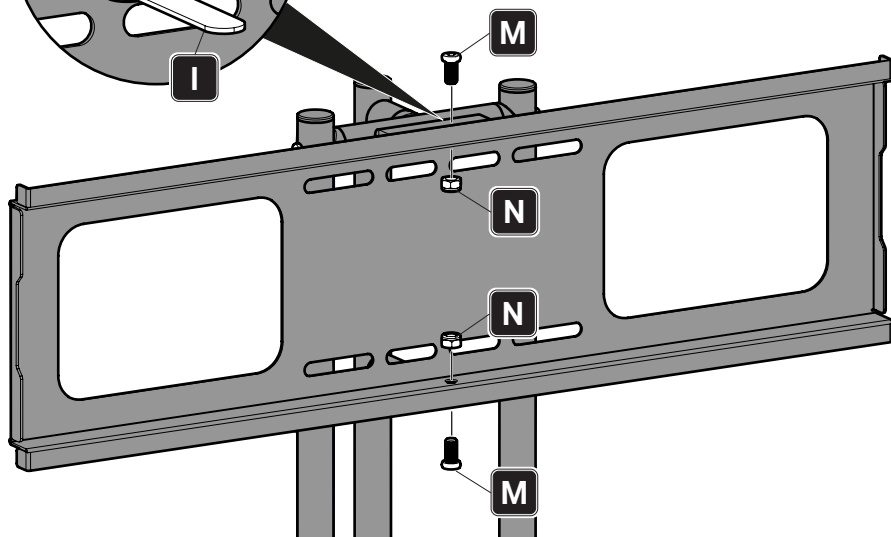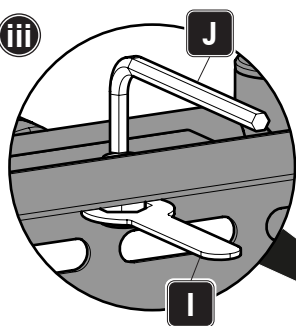

M8

L
X2




M8

M
X2



M8

N
X2

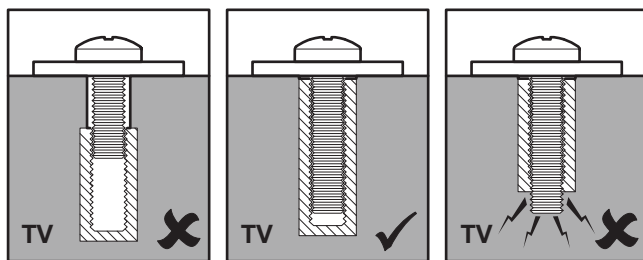


Select the correct length TV screw.

TV1 - TV7

	TV1 - TV2	TV3 - TV4	TV5 - TV7
RE2	✓	✗	✗
RE1	✓	✓	✗


Do you need **RE1** or **RE2**?

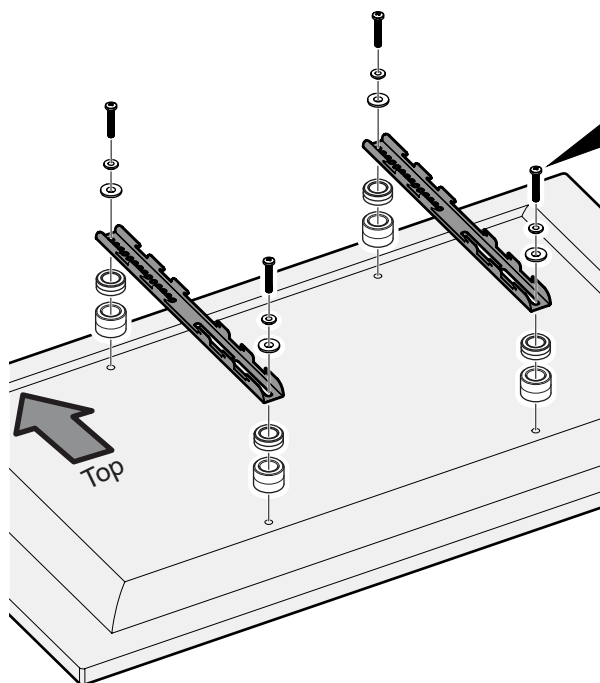

SP2

SP1







If required

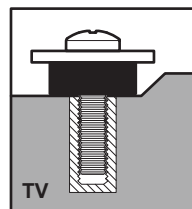


After completing this step, you will have lots of TV screws left over. Keep them in a safe place in case you require them in future.

You may need to use Spacers **SP1** or **SP2** if the screws are too long or the back of your TV is not flat.

6

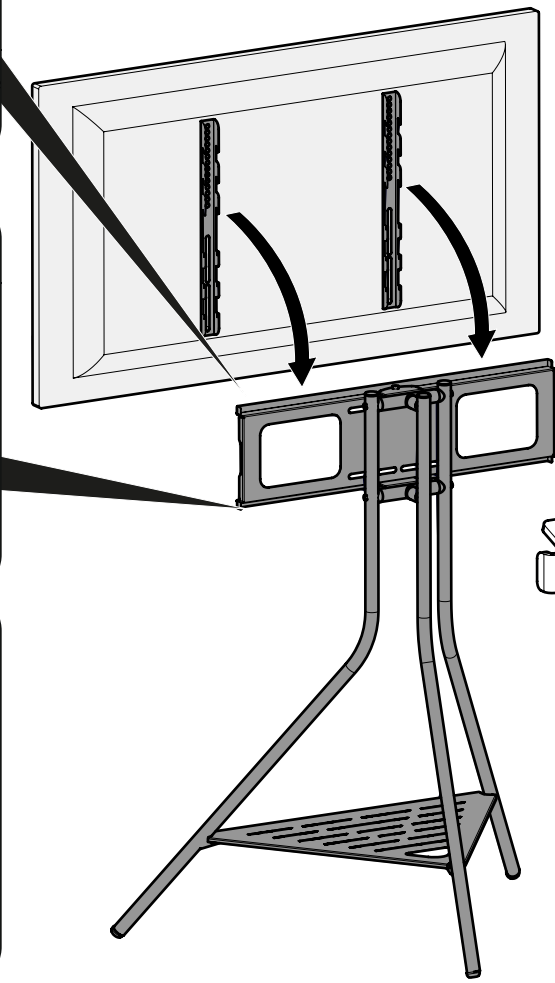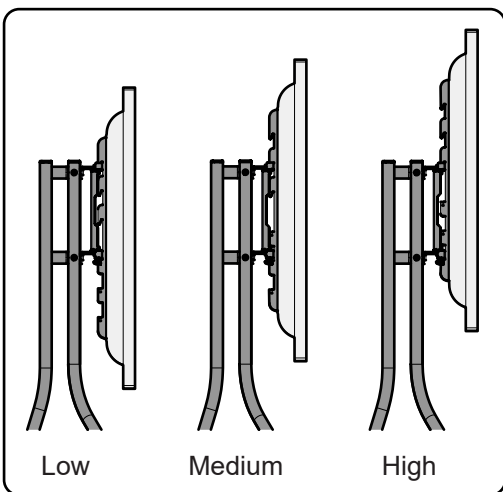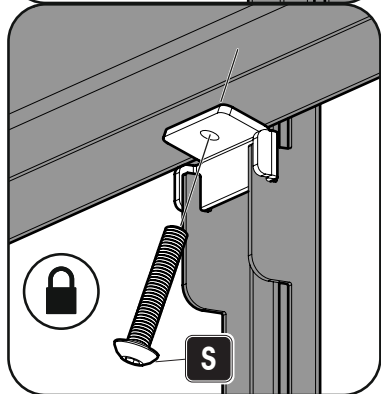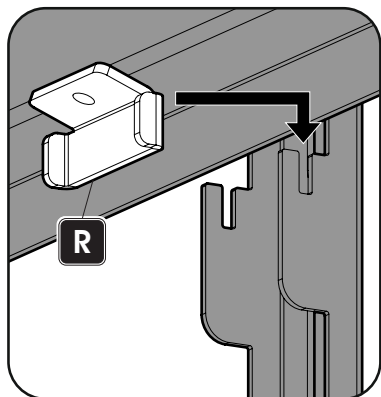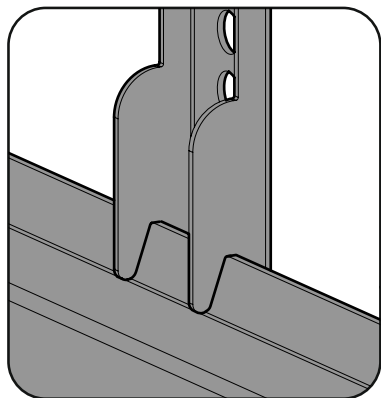


R
X2



S
X2

7

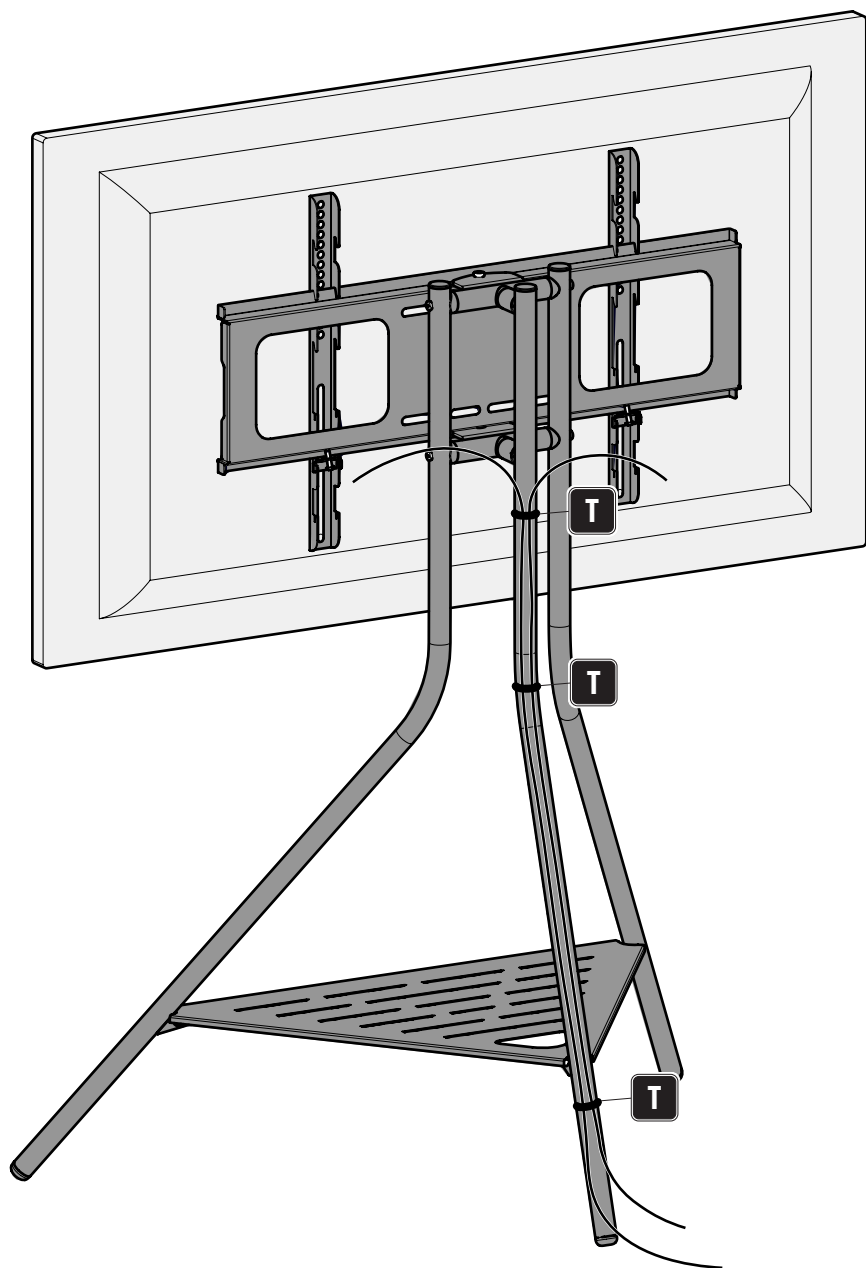T
X3