




2

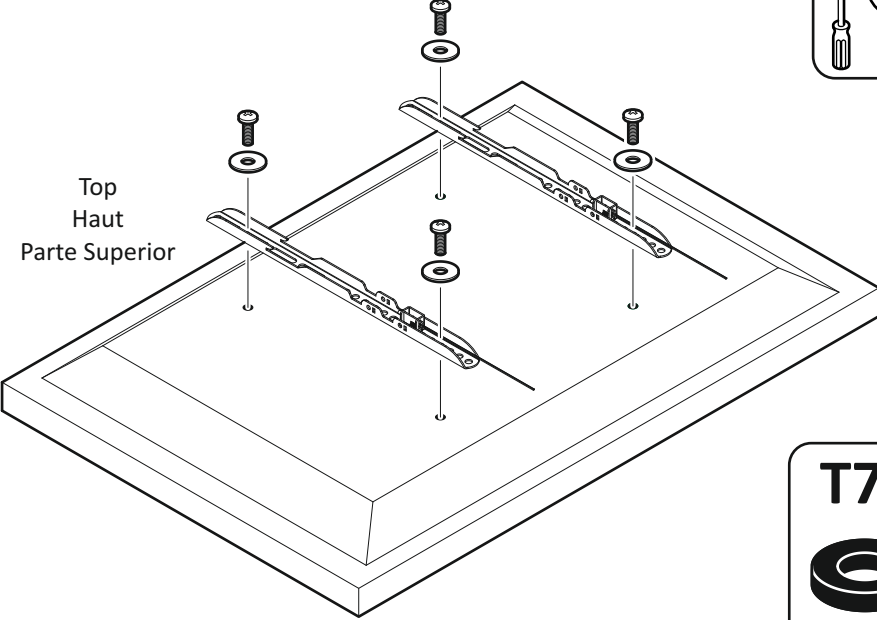

Top
Haut
Parte Superior

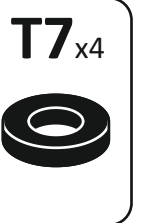


T7_{x4}




T1_{x4}
M4 x 16mm



T2_{x4}
M5 x 16mm



T3_{x4}
M6 x 16mm




T4_{x4}
M8 x 16mm



T5_{x4}
M5




T6_{x4}
M6

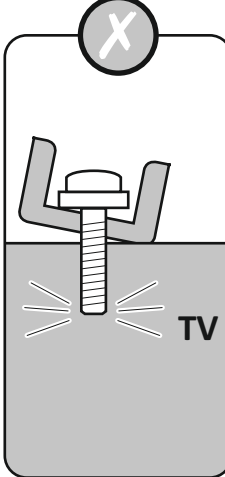

X

TV

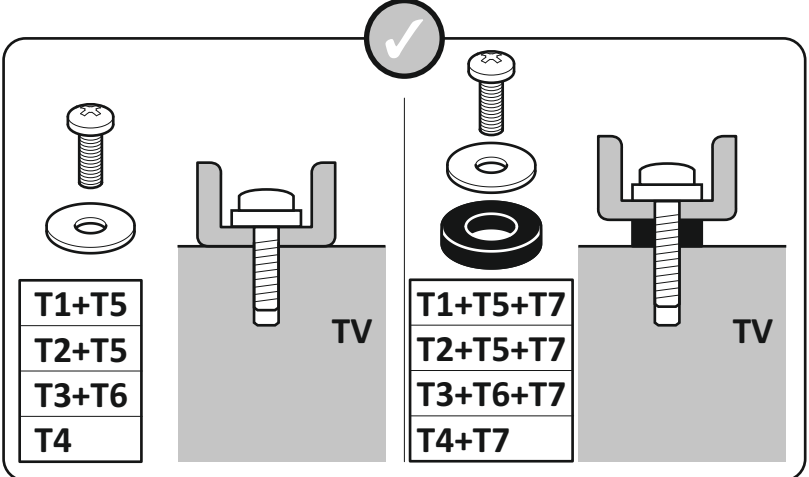


✓

TV

T1+T5
T2+T5
T3+T6
T4

T1+T5+T7
T2+T5+T7
T3+T6+T7
T4+T7

3

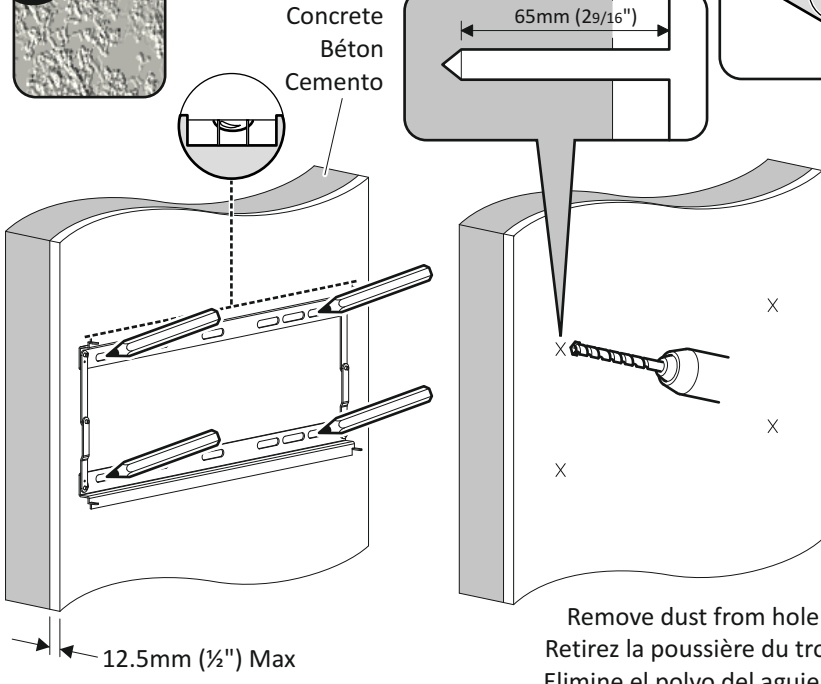


Concrete
Béton
Cemento

65mm (2 9/16")


12.5mm (1/2") Max

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero


Ø8mm (5/16")

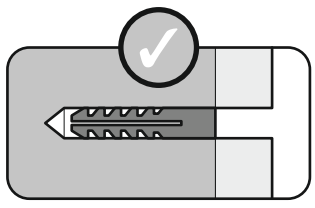


✓

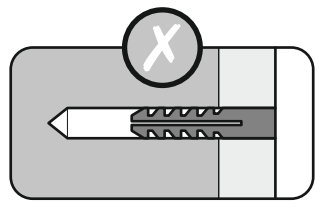


X

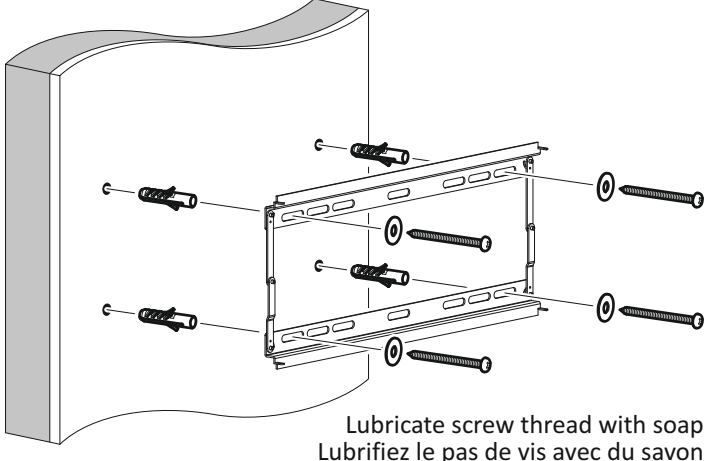

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

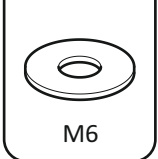

W3_{x4}
M6

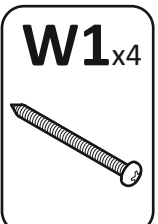


W1_{x4}



W2_{x4}


3

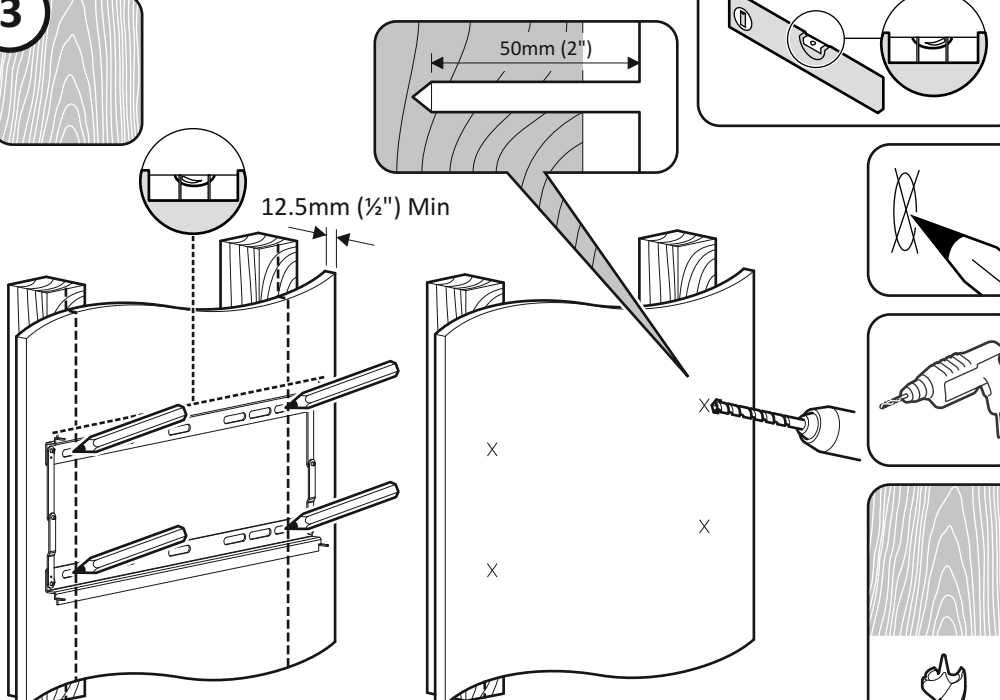



50mm (2")

12.5mm (1/2") Min


Ensure bracket is in the centre of the wood stud
Assurez-vous que l'applique est au centre de la latte de bois
Asegúrese de que el soporte está en el centro de la viga de madera

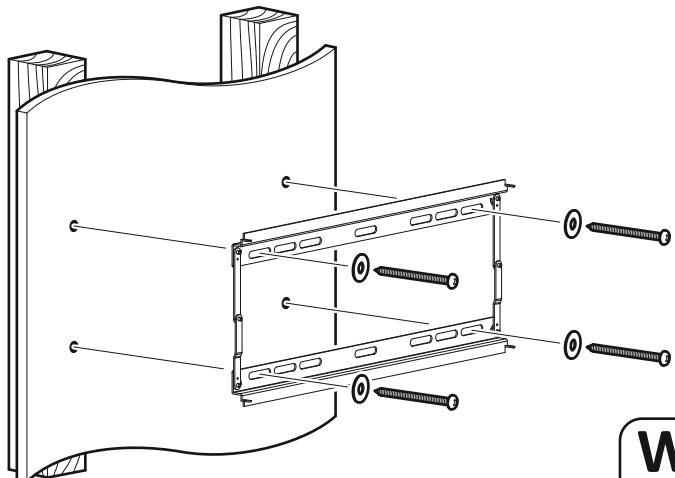

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

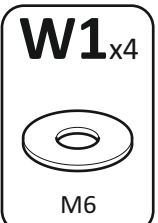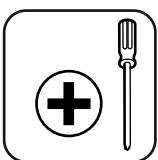


W1_{x4}
M6

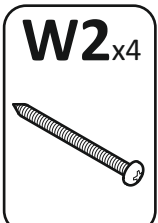

W2_{x4}

4

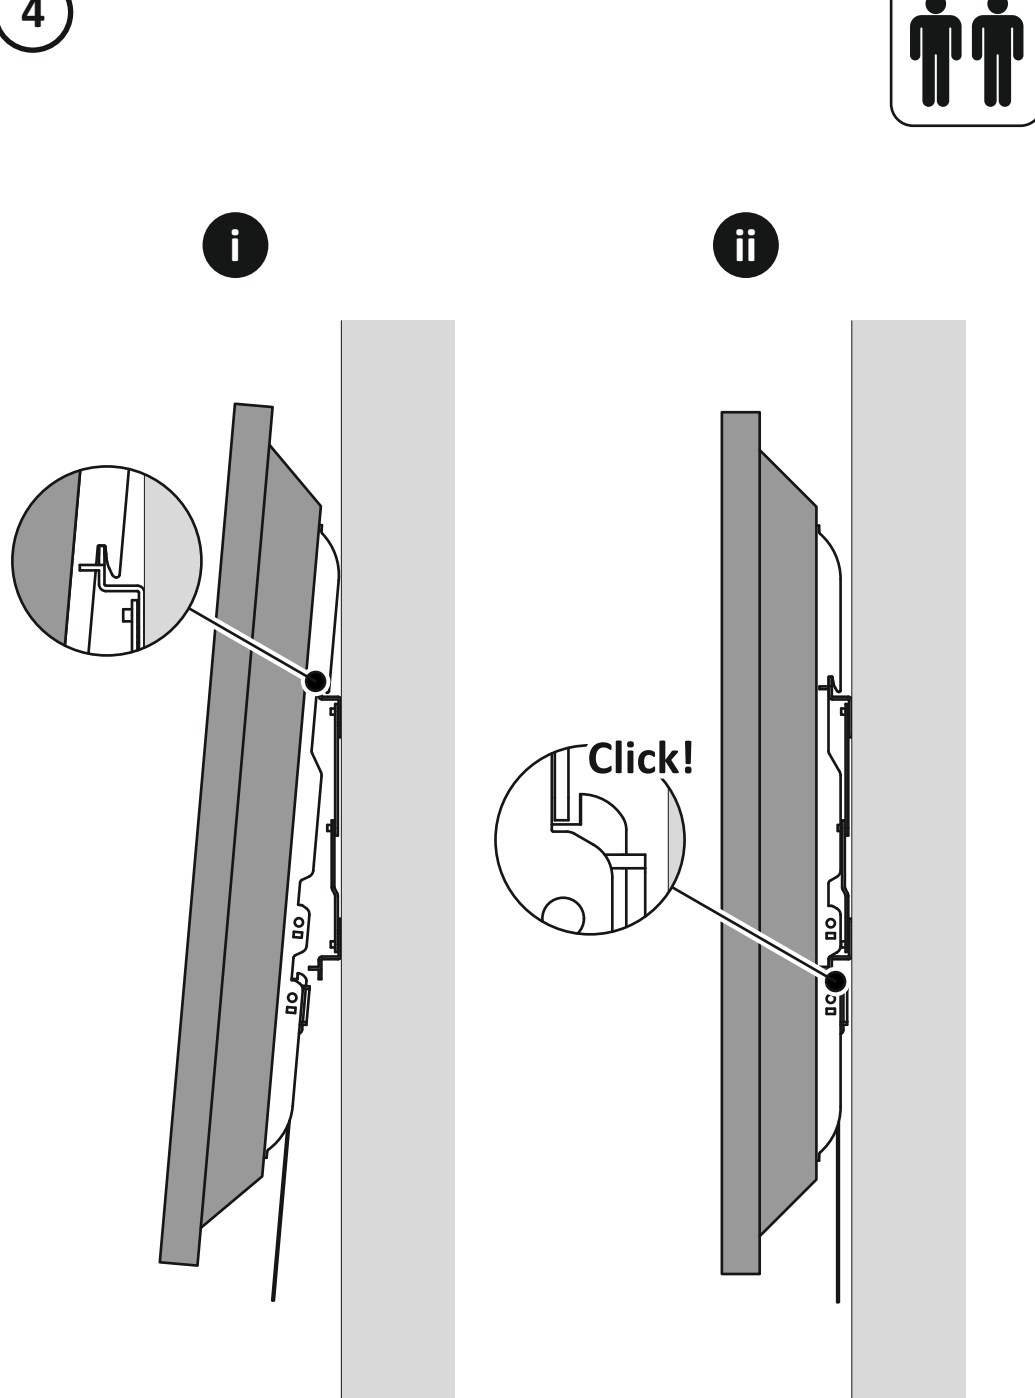

i

ii

Click!