


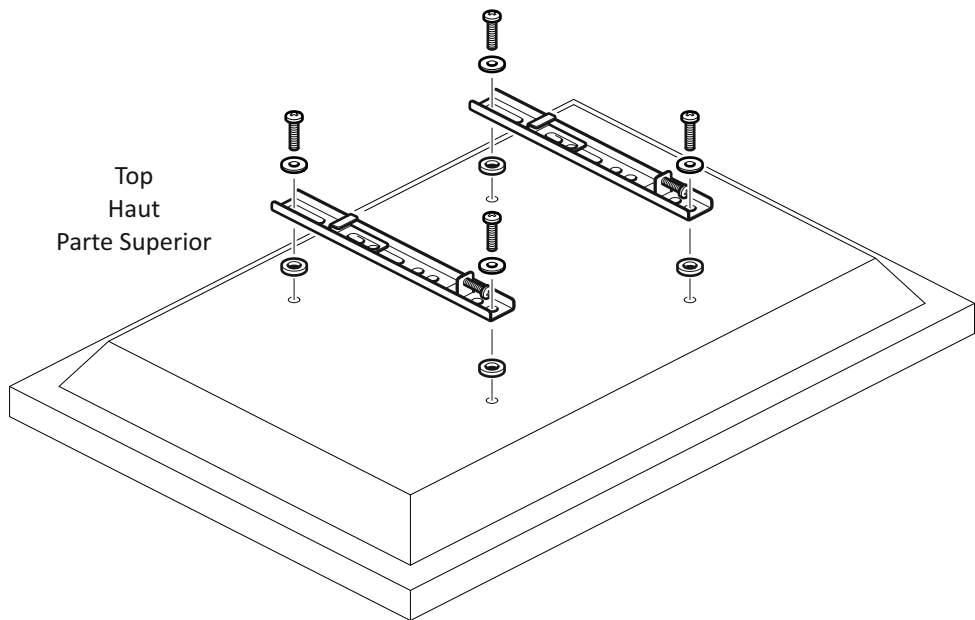

2

Top  
Haut  
Parte Superior

**A**x4

M4  
16mm

**B**x4

M5  
16mm

**C**x4

M6  
16mm

**D**x4

M8  
25mm

**E**x4



M5

**F**x4

M6

**G**x4


M6

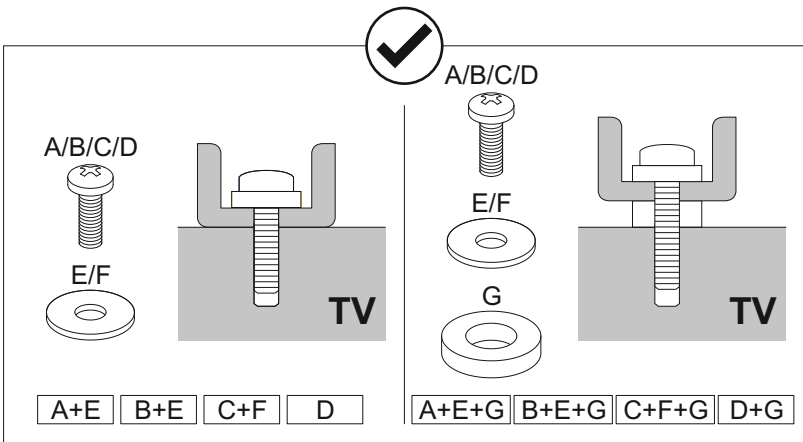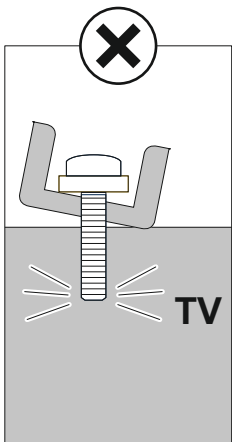


3

**Solid Wall**  
**Mur solide**  
**Pared sólida**

Concrete  
Béton  
Cemento


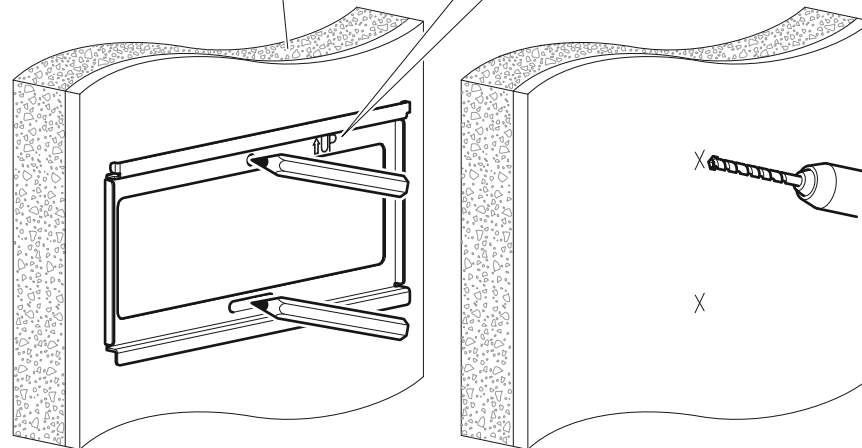


12.5mm (½") Max

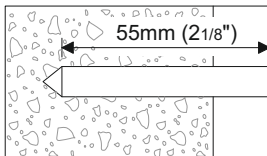

Ø8mm (5/16")

Remove dust from hole  
Retirez la poussière du trou  
Elimine el polvo del agujero

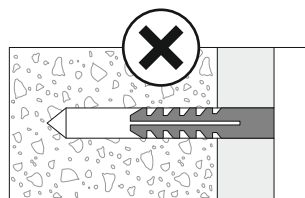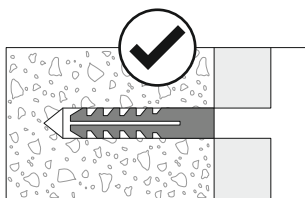**H**x2


M6

**I**x2

M6


**J**x2

M6

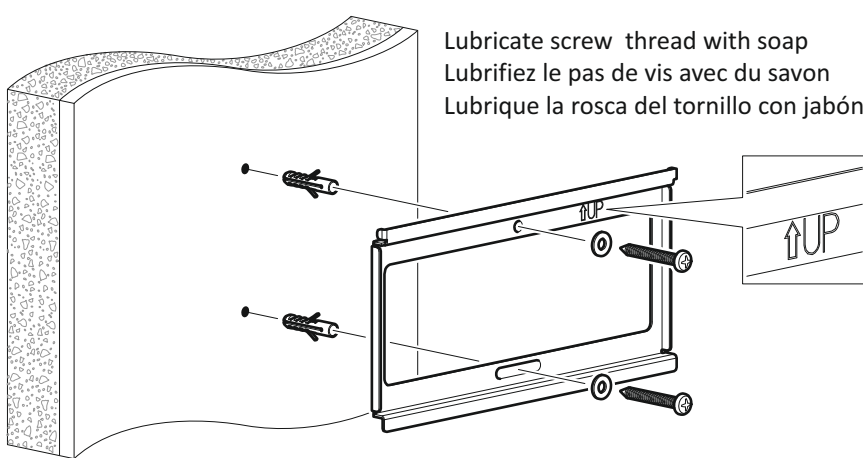


3

**Wood Stud**  
**Latte de Bois**  
**Estructura de madera**

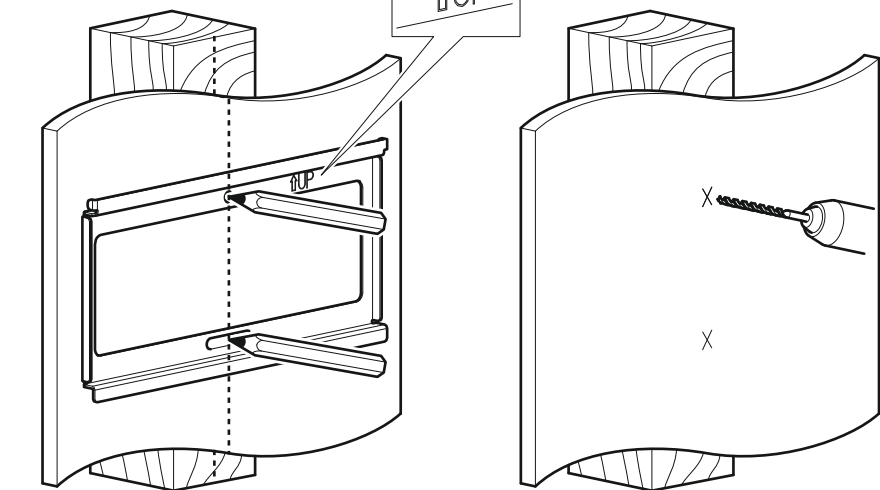


12.5mm (½") Max

Ensure bracket is in the centre of the wood stud  
Assurez-vous que l'applique est au centre de la latte de bois  
Asegúrese de que el soporte está en el centro de la viga de madera

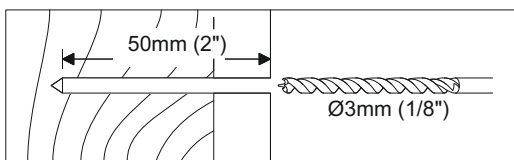

Ø3mm (1/8")

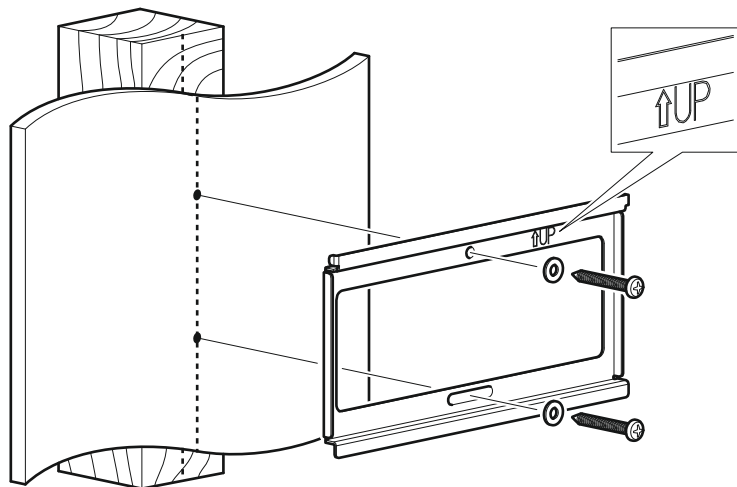**H**x2

M6

**J**x2

M6

Lubricate screw thread with soap  
Lubrifiez le pas de vis avec du savon  
Lubrique la rosca del tornillo con jabón

4

