

1

Top
Haut
Parte Superior

Top
Haut
Parte Superior

This diagram shows the first step of assembly. A rectangular frame is shown with a top panel being attached. The panel is secured by screws and washers along its edges. A callout box in the top right corner contains a plus sign and an icon of a screwdriver, indicating that a screwdriver is required for this step.

C1_{x4}



M6 x 12mm

C2x4



M6 x 30mm

C3_{x4}



M8 x 12mm

C4_{x4}

M8 x 30mm



D_{x8}

A 3D cylinder representing a disk, shown in a light gray color with a black outline.

E_{x4}



M6

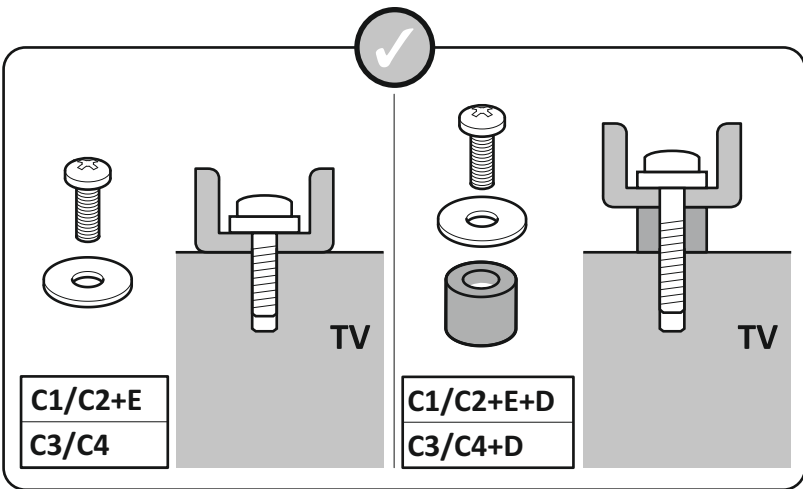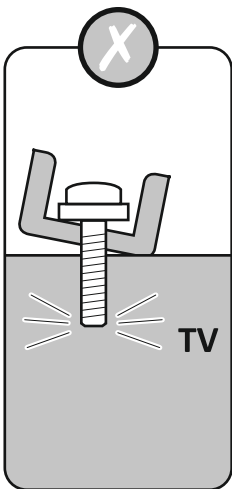

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero

 DO NOT overtighten
Ne serrez pas trop fort
No apriete demasiado

G_{x4}



M6

F_{x4}



H_{x4}



F_{x4}



Ensure bracket is in the centre of the wood stud
Assurez-vous que l'applique est au centre de la
latte de bois
Asegúrese de que el soporte está en el centro
de la viga de madera

Lubricate screw thread with soap
 Lubrifiez le pas de vis avec du savon
 Lubrique la rosca del tornillo con jabón

A

G

F

!

DO NOT overtighten
Ne serrez pas trop fort
No apriete demasiado

3

Click!