
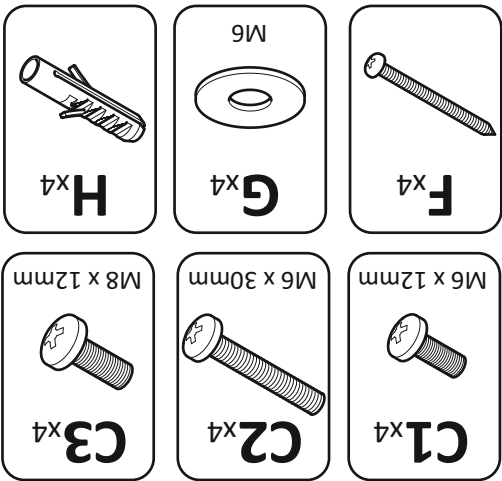






 M6 E x4	 D x8	 M8 x 30mm C4 x4	 M8 x 12mm C3 x4	 M6 x 30mm C2 x4	 M6 x 12mm C1 x4
--	--	--	--	--	--

1

Top Haut
Parte Superior

C1_{x4}



M6 x 12mm

C2_{x4}



M6 x 30mm

C3_{x4}



M8 x 12mm

C4_{x4}





M8 x 30mm


E_{x4}



M6

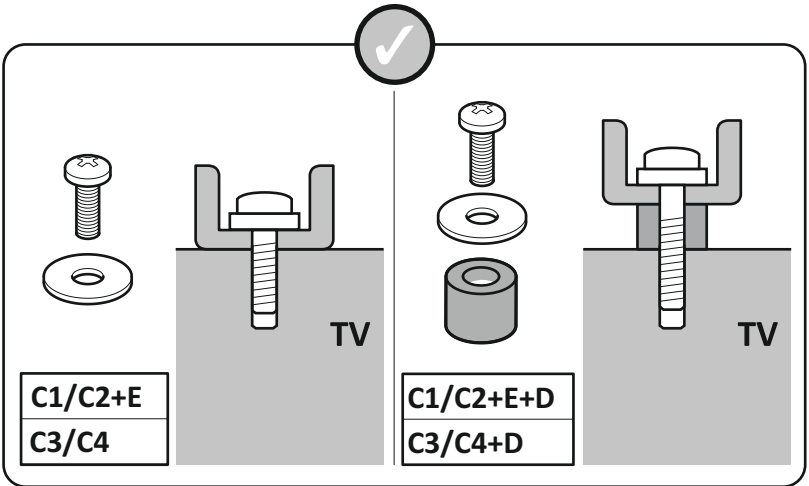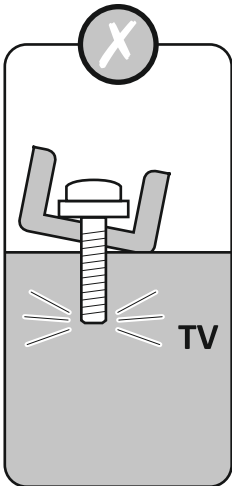


Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

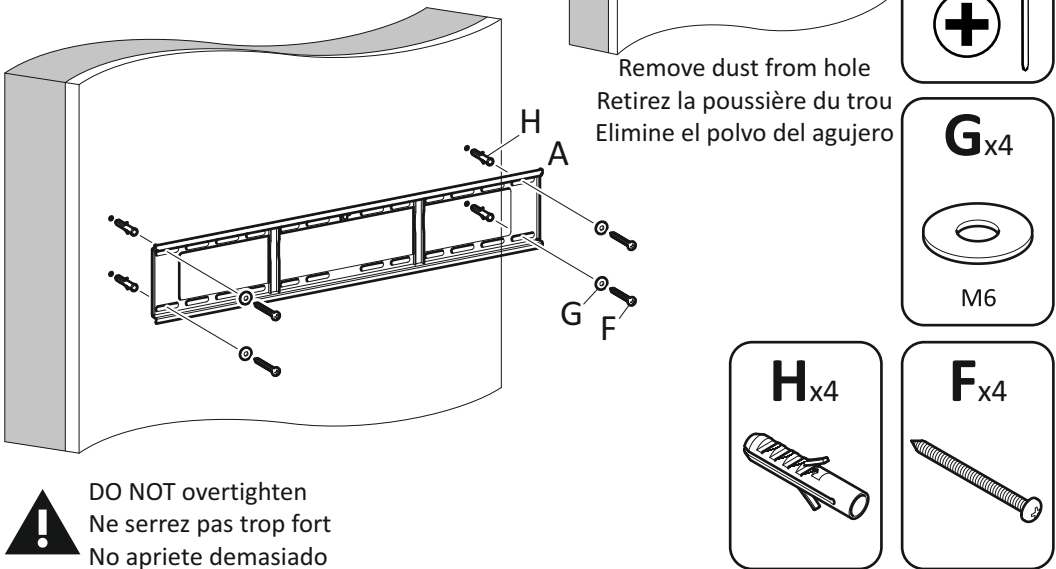

DO NOT overtighten
Ne serrez pas trop fort
No apriete demasiado

Ensure bracket is in the centre of the wood stud
Assurez-vous que l'applique est au centre de la
latte de bois
Asegúrese de que el soporte está en el centro
de la viga de madera

Lubricate screw thread with soap
 Lubrifiez le pas de vis avec du savon
 Lubrique la rosca del tornillo con jabón

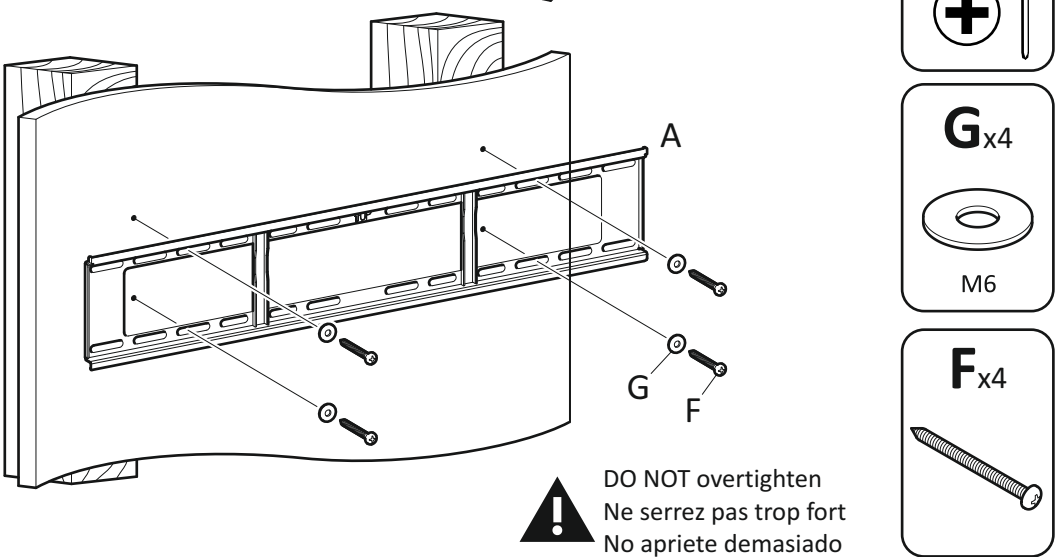

DO NOT overtighten
Ne serrez pas trop fort
No apriete demasiado

3

Click!