25kg
55lbs

STOP

Read through ALL instructions before commencing installation.
If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

Installation video guide and TV Height Calculator tool at **myTVmount.com**

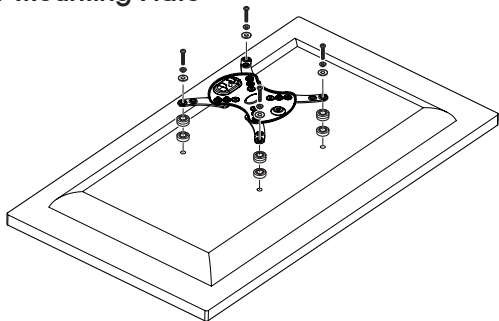UK-based support team:
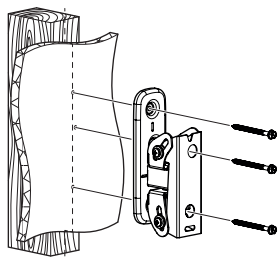**0333 320 0463**
Phone lines open Mon-Fri during AVF office hours
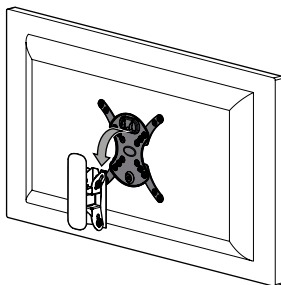
myTVmount.com

Assembly Overview
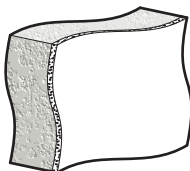
Fit the TV Mounting Plate
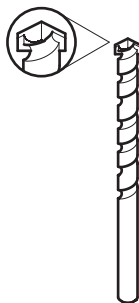
Fit the Wall Bracket

Hang the TV

Suitable Wall Types

Solid Wall   **Wood Stud**

Tools Recommended
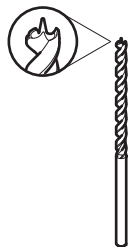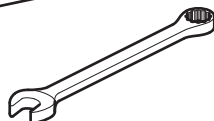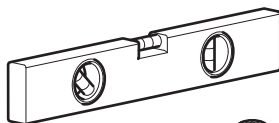
Stud Finder

Ø10mm (25/64")   Ø3mm (1/8")
Masonry   Wood

Index

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.
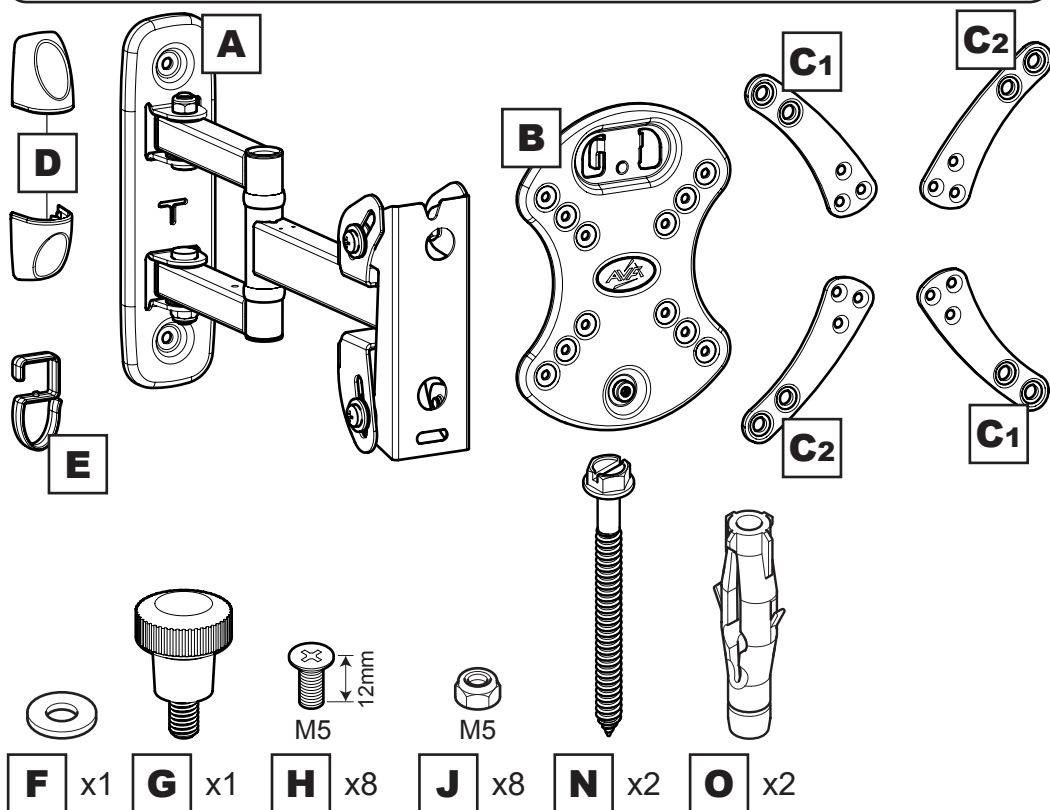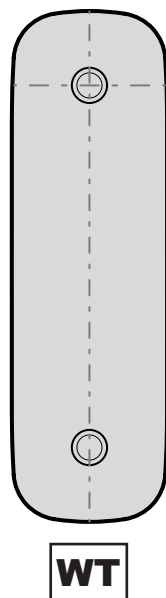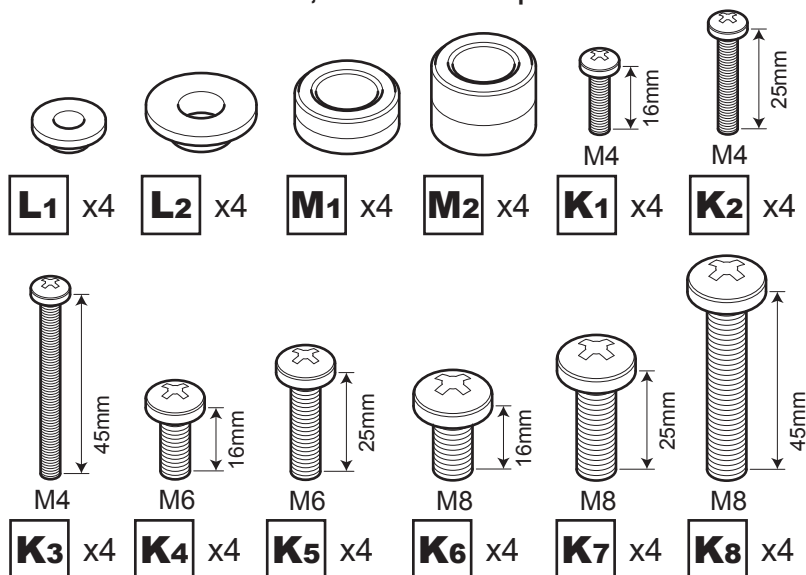
It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.
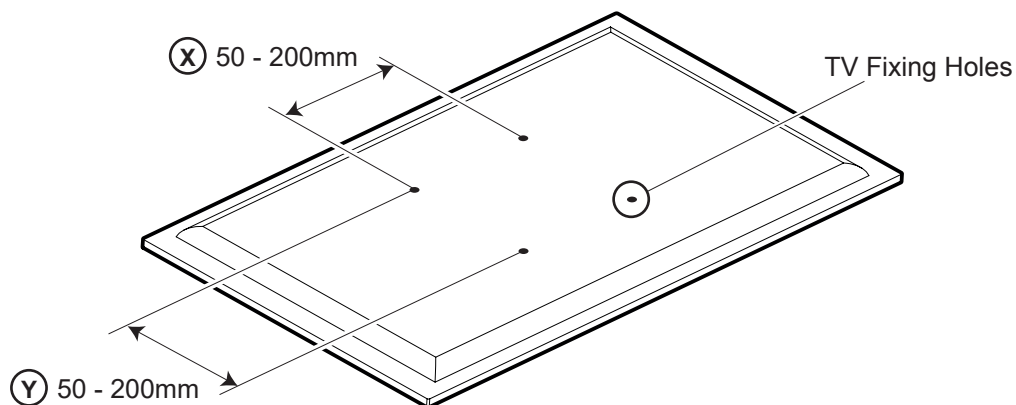
Boxed Parts

D

A

B

C₁

C₂

C₂

C₁

E

F x1	**G** x1	**H** x8	**J** x8	**N** x2	**O** x2

12mm · M5

M5

TV Screws, Reducers and Spacers

L₁ x4	**L₂** x4	**M₁** x4	**M₂** x4	**K₁** x4	**K₂** x4

16mm · M4

25mm · M4

K₃ x4	**K₄** x4	**K₅** x4	**K₆** x4	**K₇** x4	**K₈** x4

45mm · M4

16mm · M6

25mm · M6

16mm · M8

25mm · M8

45mm · M8

WT

1 **Measure the TV fixing holes Width and Height**

(X) 50 - 200mm

TV Fixing Holes

(Y) 50 - 200mm

! If width (X) is greater than 200mm or height (Y) greater than 200mm STOP installation now and contact the customer help line.

M4 = K_1-K_3

M6 = K_4-K_5

M8 = K_6-K_8
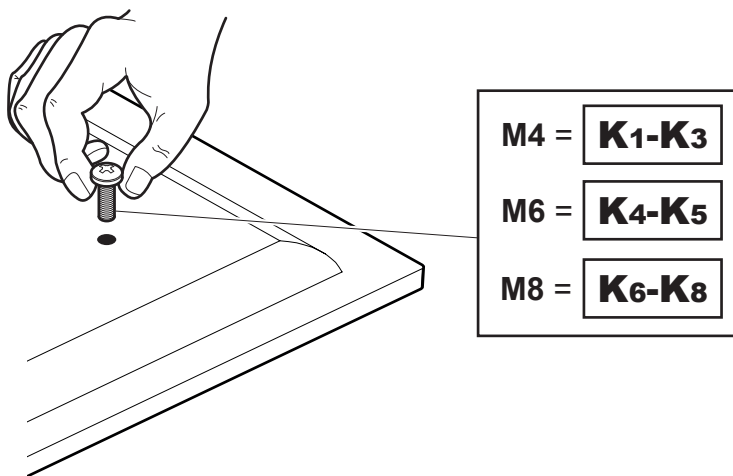
You are provided with 3 diameters of TV fixing screws **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

2 Preparing the TV Mounting Plate

Use the option that fits your TV

OPTION 1	OPTION 2	OPTION 3
(X) 50mm x (Y) 50mm	(X) 100mm x (Y) 200mm	(X) 200mm x (Y) 200mm
(X) 75mm x (Y) 75mm	(X) 200mm x (Y) 100mm	
(X) 100mm x (Y) 100mm		

If in any doubt please call the customer helpline

OPTION 1

OPTION 2

Y
200mm

X
100mm

Y
100mm

X
200mm

OPTION 3

Y
200mm

X
200mm
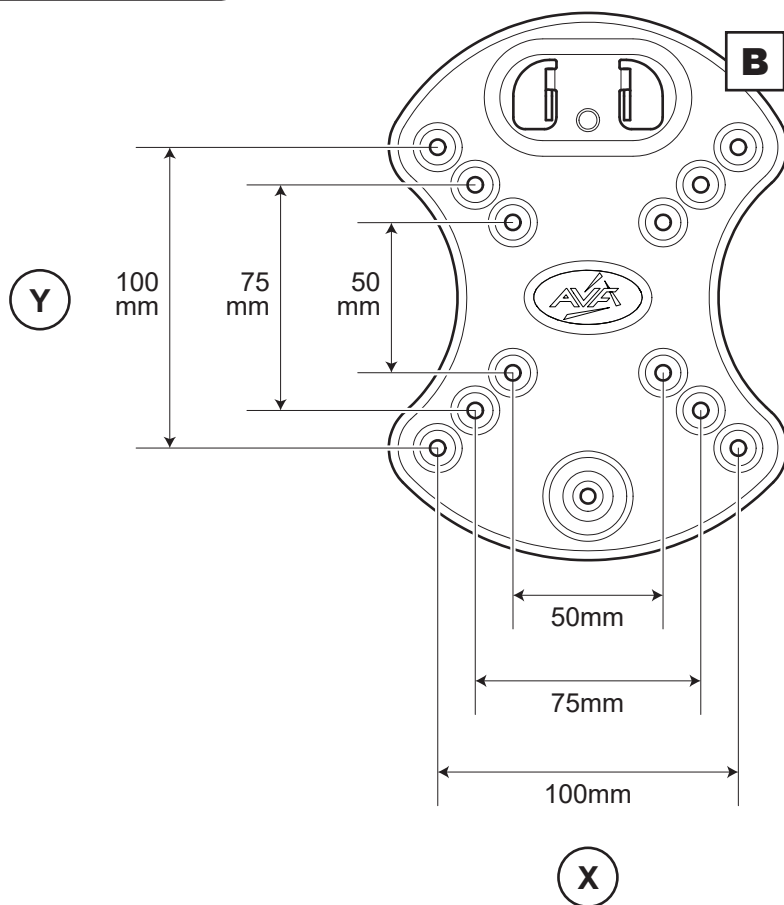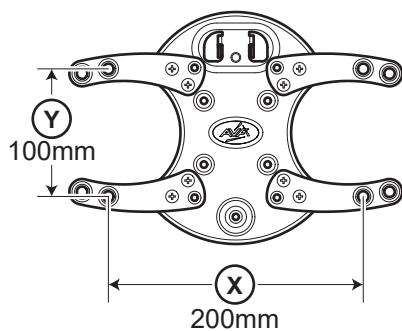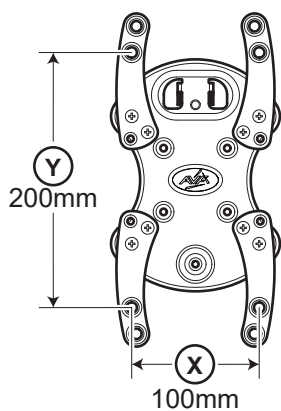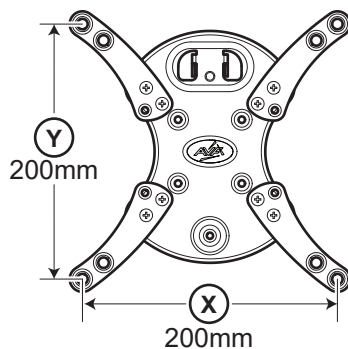
Example shown is 200 x 200 fixings

Top

J

C_1

B

C_2

C_2

H

C_1

M5
12mm

M5
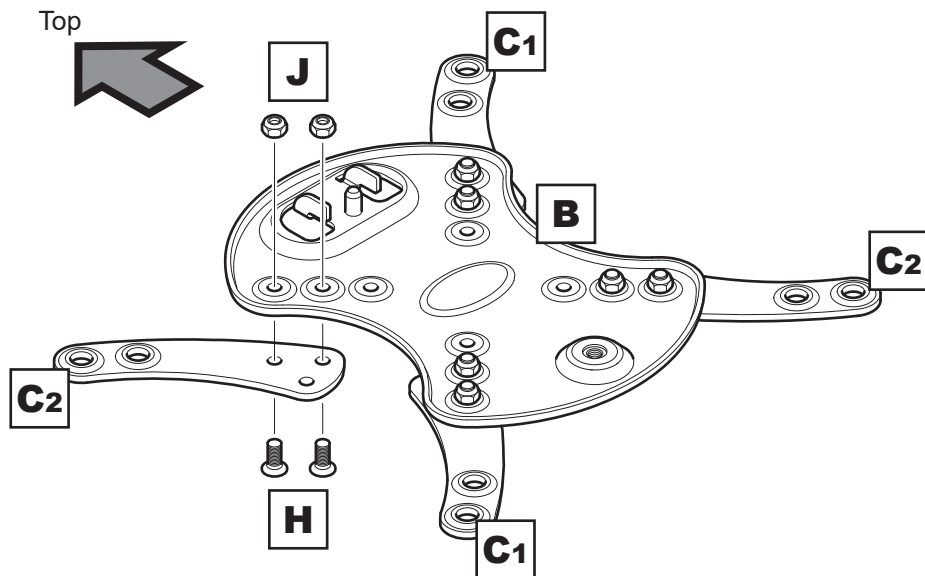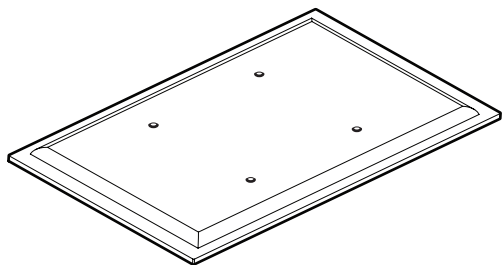
H ×8   J ×8

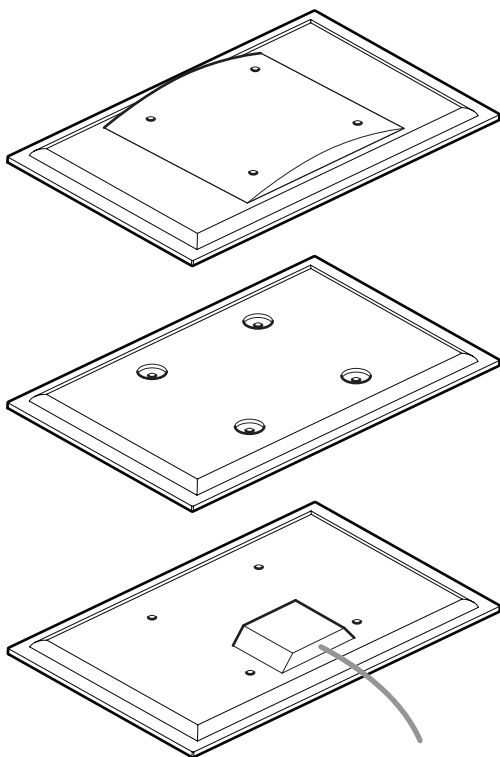# 3 Fitting the TV Mounting Plate

No Spacers
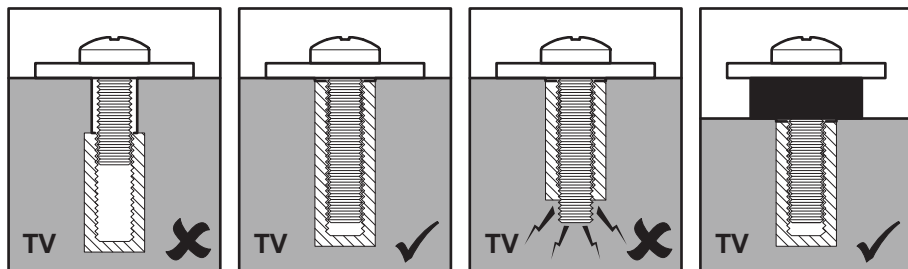
For TVs with flat / unobstructed back.

Spacers M1/M2

For TVs with irregular / obstructed back.
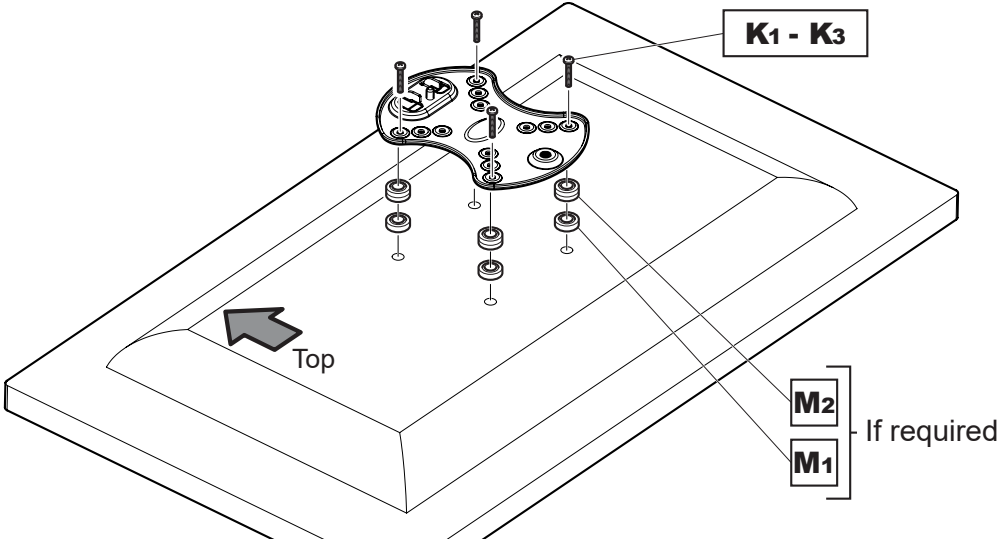
WARNING

TV ✗
TV ✓
TV ✗
TV ✓

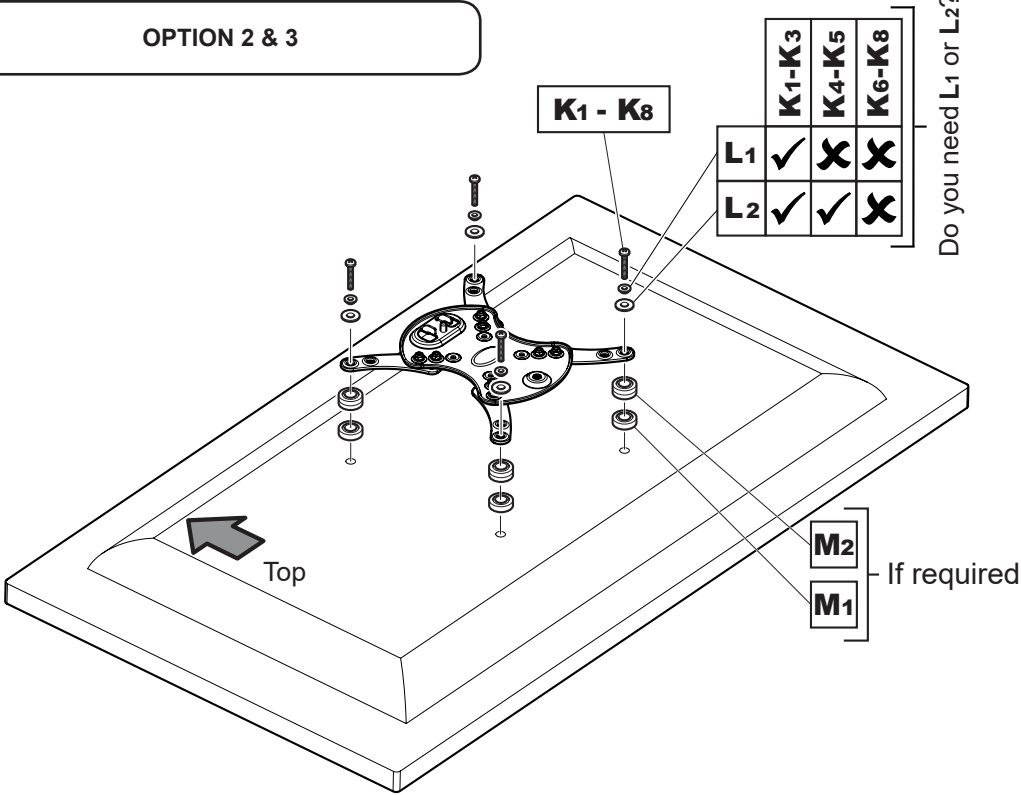After completing step 3 you will have fittings left over, please keep for future reference.

Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.
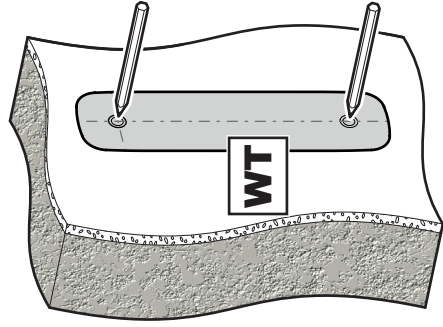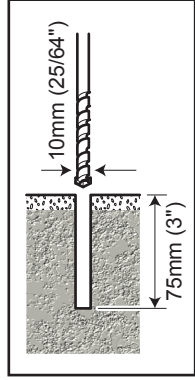
OPTION 1

$K_1 - K_3$

Top

M_2

M_1

- If required

OPTION 2 & 3

$K_1 - K_8$

	K_1-K_3	K_4-K_5	K_6-K_8
L_1	✓	✗	✗
L_2	✓	✓	✗

Do you need L_1 or L_2?

Top

M_2

M_1

- If required

4 **Fitting the Wall Bracket**

Solid Wall

WT

10mm (25/64")

75mm (3")

Remove Dust from Hole.

Wood Stud
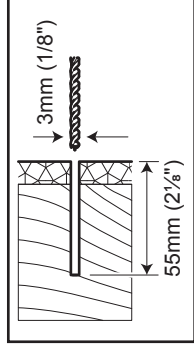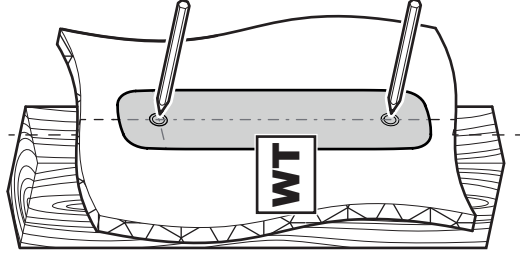
WT

3mm (1/8")

55mm (2¹⁄₈")

Ensure bracket is in the centre of the wood stud
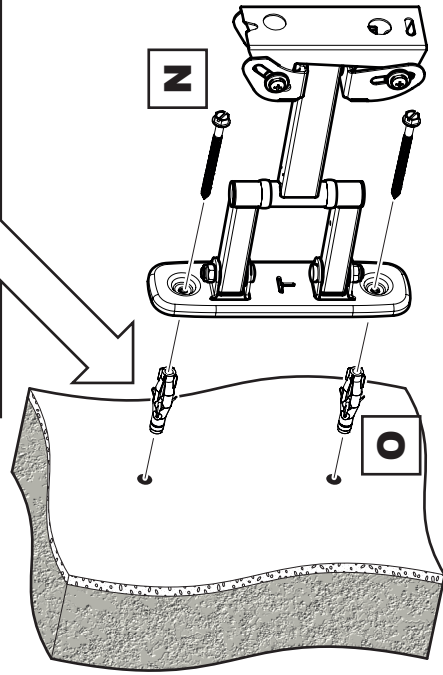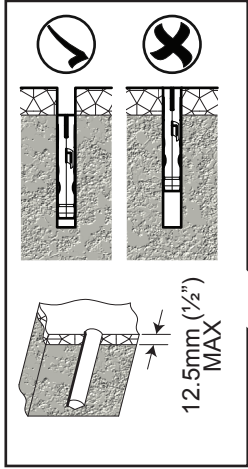
N x2

Lubricate screw thread with soap.

DO NOT overtighten screws.
Tighten screws by hand only.

!

12.5mm (½")
MAX

O

Lubricate screw thread with soap.

DO NOT overtighten screws.
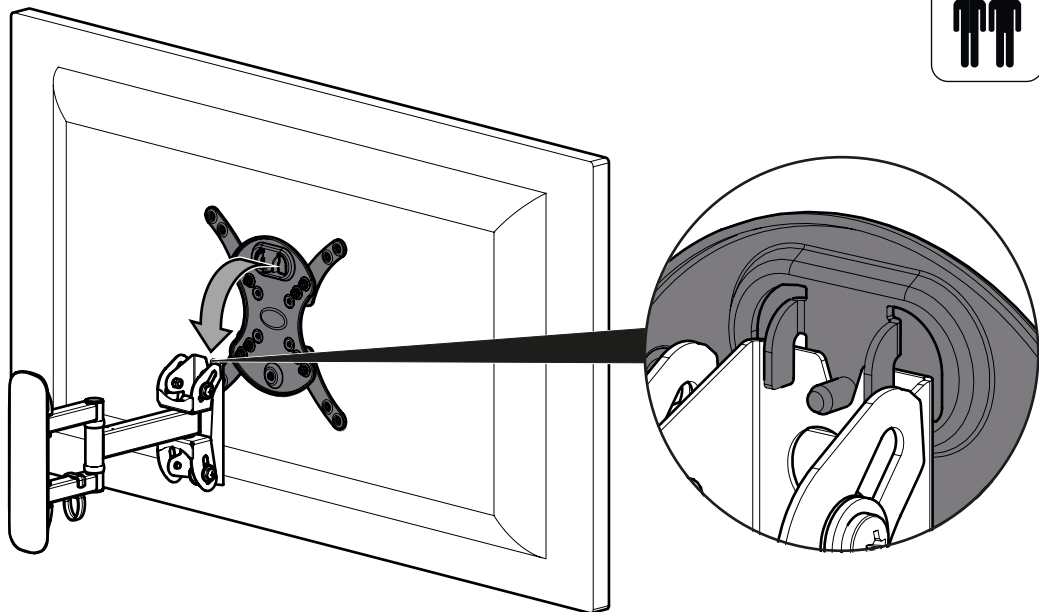Tighten screws by hand only.

!

N x2
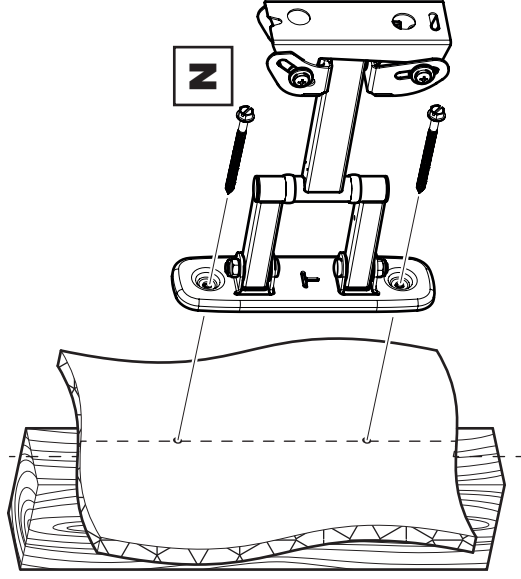
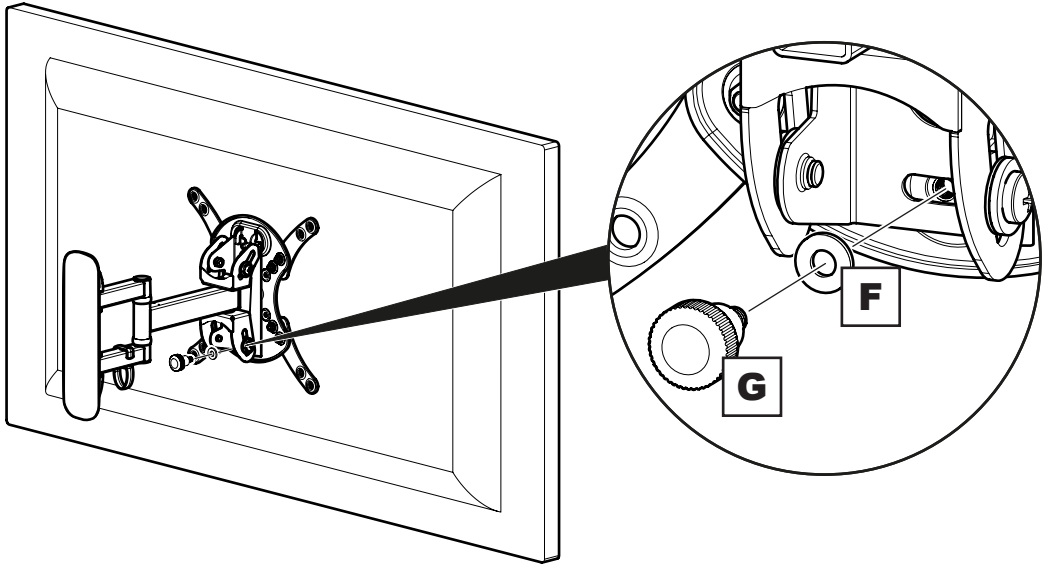**O** x2

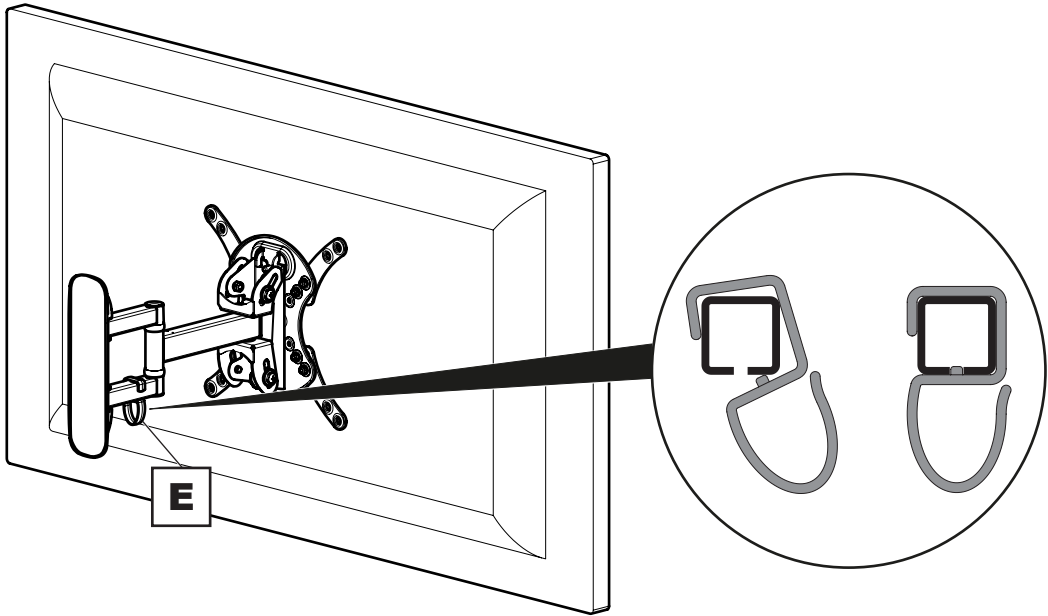# 5 Fitting the Wall Bracket Covers
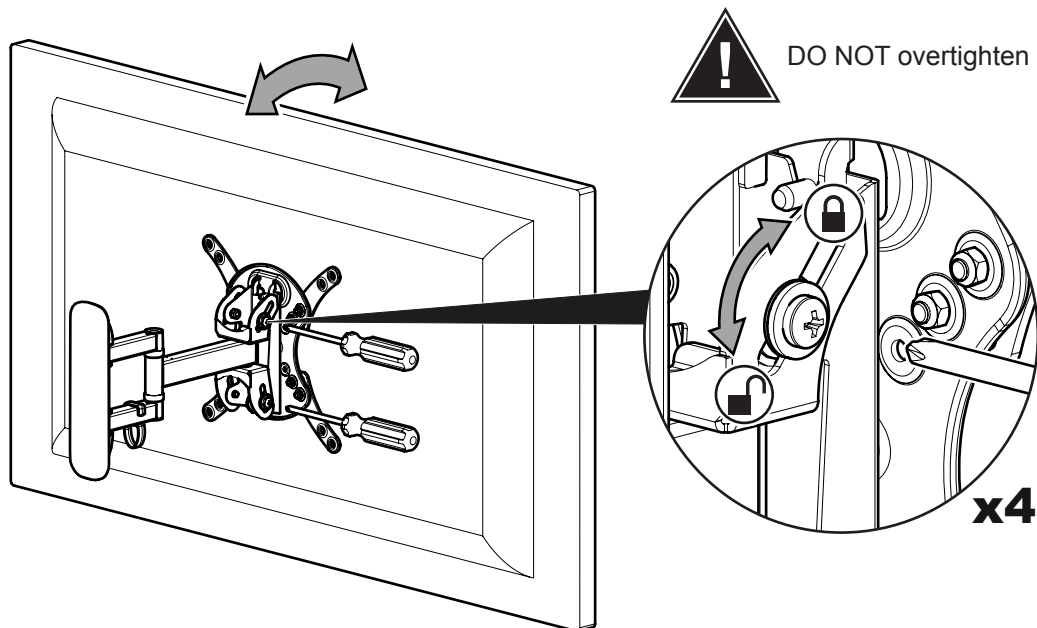

D

D
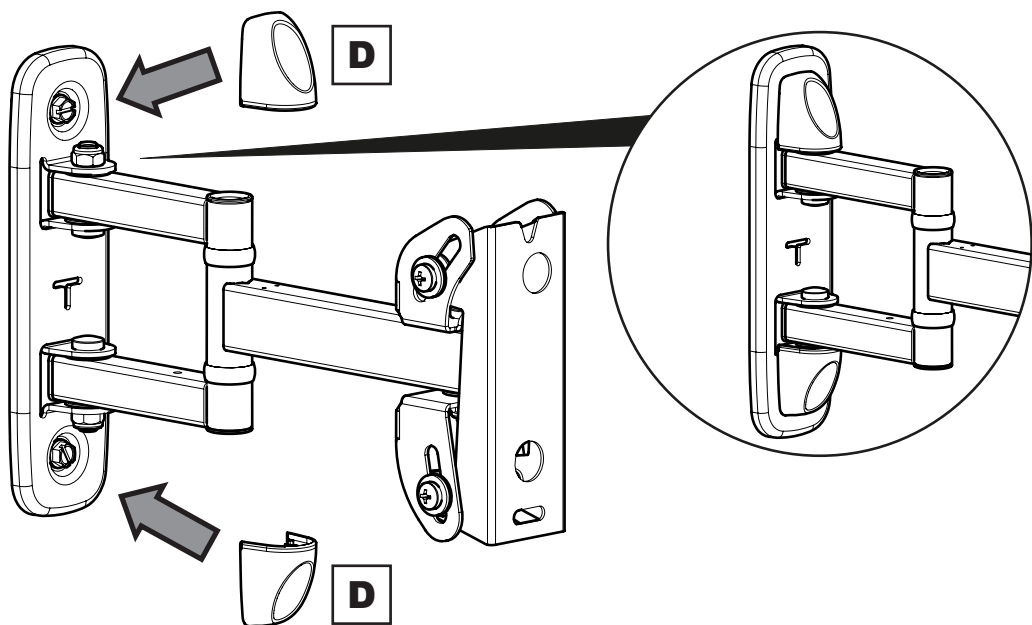
6 Hanging the TV

Hanging the TV

Locking the TV

7 Fitting the Cable Management

8 Tilt Adjustment

Adjust screws to achieve perfect tilt resistance if required.

! DO NOT overtighten

x4

9 TV Levelling